

ScopeControl/ GuideControl checklist



Install products

- Required space:

ScopeControl dimensions (WxDxH):	1102x370x295 mm
GuideControl dimensions (WxDxH):	302x200x95 mm
Recommended table size SC:	1200x500 mm
Recommended table size SC + GC:	1500 x 500 mm
Platform carrying capacity	>75 kg

- Transport from doorstep to destined working area (pallet truck)

- 2x 115/240V (SC/GC)

- 2x UTP ethernet connection (SC/GC)

- In case no DoviScan was purchased a USB keyboard can be useful

- Minimum of 8 hours of temperature stabilization before starting up.



Make sure firewall/connection is established

- Check infrastructure organisation. Make sure the organisations firewall allows communication with Endoscopemanager.com

- Scopecontrol must have access to Endoscopemanager.com with SSH, so port 22 needs to be opened. Technical info for IT below
 - DNS should resolve

 - eg nslookup endoscopemanager.com should return 80.65.101.132

 - nslookup data1p1.endoscopemanager.com should return 84.241.175.30

 - connection to endoscopemanager.com port 22

 - connection to data1p1.endoscopemanager.com port 22 should be allowed from Scopecon-

ScopeControl/GuideControl checklist



Setup and log in to Endoscopemanager

- Create Endoscopemanager.com organisation account
- Create Endoscopemanager.com user inlog(s)
- Set up correct admin/users rights



Import scopes and serial numbers

- Download the import document via Endoscopemanager.com
- Fill and import the document
- Check if scopes are visible on ScopeControl



Place scope

- Select your endoscope through the ScopeControl menu or scan the datamatrix with DoviScan
- Open lid, place scope and position fiber tester



Start testing

- Start.